
martor

TECHNICAL DATA SHEET

SECUNORM MULTISET NO. 118001

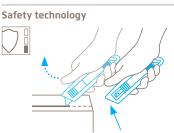

Automatic blade retraction – a high degree of safety

The automatic blade retraction of the SECUNORM MULTISET guarantees a very high degree of safety from cut injuries. As soon as you have started to cut, take your thumb off the slider. In this way, the blade can automatically withdraw into the handle, the moment it loses contact with the material being cut.



SAFETY KNIFE WITH FLEXIBLE BLADE EXTENSION AND AUTOMATIC BLADE RETRACTION.

Order No. 118001.02

Many cutting tools in one. With trapezoid blade.

The SECUNORM MULTISET is a respected member of our legendary PROFI family. It adopted the name "MULTISET" due to of its unique property: a multi-'set-able' blade length. Ultimately, it's up to you to decide how long the blade should extend: 5, 9, 14, 19, 24 mm, the options are multiple. Depending on your needs, you can adjust the blade length. Your needs change? SECUNORM MULTISET can change with you!

Flexible cutting depth

What does the SECUNORM MULTISET have that other cutters don't? A locking screw with which you can adjust blade extension infinitely up to 25 mm, that's what! In other words, the SECUNORM MULTISET can be easily and adapted to perfectly meet individual needs.

Abrasion resistant

The plastic insert of the SECUNORM MULTISET slots into a fully aluminium body. With its robust body and replaceable insert,

this cutter can cope with high cutting frequencies over an extended period of time.

Double-sided blade


Before you need to change the quality blade, you have the chance to turn it over once. Usage time of the blade is doubled and fatigue is held at bay: with a simple flip of the blade, your SECUNORM MULTISET will cut like new again.

Tool-less blade change


Ready, set, blade change! Changing the SECUNORM MULTISET blade is quickly done. Simply push the plastic insert out of the handle and either rotate or replace the blade.

For right and left handers


The SECUNORM MULTISET is the right size for every hand. Yours too. If you are a left hander, simply turn the blade 180° and your cutting tool is ready to use.

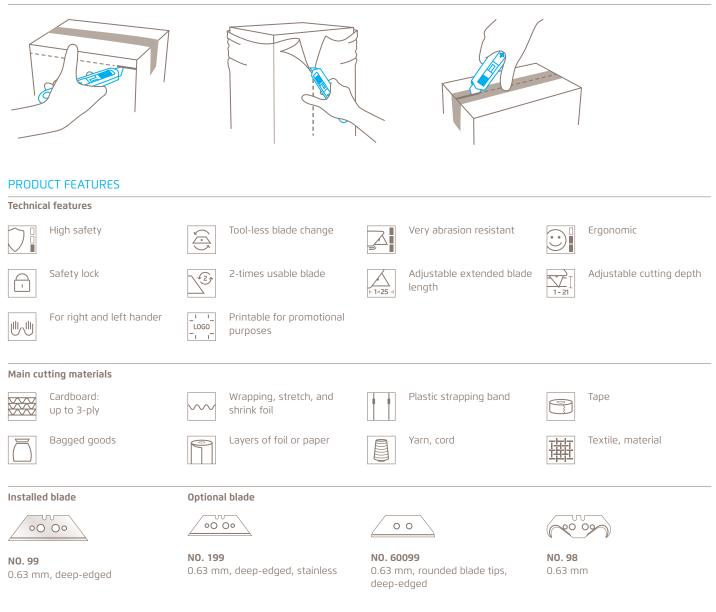

BLADE CHANGE



Use the slider to push the plastic insert back and out of the handle. Don't pull the insert while holding onto the slider. Reverse or replace the blade and reinstall the plastic insert. Make sure you position the new or turned blade exactly over the locating lugs.



Attention: Never hold your hand in front of the blade exit while inserting the blade! For use by left-handers: Turn the blade through 180 degs.



Work the slider to check that the autoretract mechanism is working smoothly.

SERVICES OFFERED

Safety poster



Training video

Technical data sheet



Consulting service

PRODUCT AND PACKAGING DETAILS

Order No.	NO. 118001.02	Packaging unit	1 in single unit box
Knife size (L x W x H)	142 x 19 x 31 mm	Size Single unit box	154 x 22 x 38 mm
Weight knife	82.0 g	Weight single unit box	100.0 g
Basic material	Aluminium	EAN Code single unit box	4002632918643
Extended blade length	1 - 23.3 mm	Quantity in outer pack	10 knives
Cutting depth	1 - 20.5 mm	Size outer pack	115 x 80 x 160 mm
		Weight outer pack	990.0 g
		EAN Code outer pack	4002632969966

SAFETY CERTIFICATE

Date of issue	11.08.2011	Certificates and awards
Certification	GS certificate NO. S 60112078	
		TÜVRheinland

Customs tariff number

SECURITY ADVICE

To ensure that you use your new MARTOR knife safely and most eff ectively, please read and note the following user-instructions. Please keep the written guide in a safe place so that you can access it at any time.

1. General application instructions: Please use the product carefully for cutting work only and not for any purposes other than those that are intended. Please take the correct handling and the proper use of the knives into account in this regard.

2. Special application instructions to avoid the danger of injuries: Only use knives that are in perfect condition and have sharp, clean and undamaged blades. employ the utmost care when handling the knives.

CAUTION: The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade! To reduce the danger of injuries, hold the hand that is being used to restrain and stabilise the cutting base in such a manner that the restraining hand or even other body parts are not endangered in the event that the knife slips.

3. Replacement of spare parts: Replace any blades that become dull at the right time! Use only the replacement blades

available at MARTOR for this purpose. Dispose of old blades in a proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries. Never perform any repairs yourself. If the knife displays signs of aging or other wear, e.g. function problems when changing the blade or in the handling of the blade pushers, then it must be rejected and replaced with a new one. Any modifications or manipulations to the product are prohibited, as they impair the product safety. CAUTION: There is an extremely high danger of injuries here!

82119300

4. Non-use of the knife: Always secure the blade in such a way that injuries due to cuts are excluded. Store the knife in a secure place.

5. Care instructions: Always keep the knife clean and do not expose it to unnecessary humidity to safeguard a long service life.

CAUTION: No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

BELT HOLSTER S WITH CLIP NO. 9920	What do you do with your cutting tools when you are not actually using them? The MARTOR BELT HOLSTER S is a ro- bust holder that allows you to carry all compact MARTOR cutters as well as our safey scissors at all times. In addition, the compartments are designed to allow you to load differ- ent tools: for example you can also carry a pen or a pack of blades. The MARTOR BELT HOLSTER is the ideal place to stow your tools safely when moving from A to B - and have them at hand, as soon as they are required.
HOLSTER SMALL NO. 9842	This blue plastic HOLSTER is just like the black version, only smaller. Use it to safely store and transport SECUNORM cut- ters MULTISAFE, MULTISET, PROFI, PROFI LIGHT, PROFI25 and PROFI40. With this holster on your hip, your cutter will always be within grasping range.
USED BLADE CONTAINER NO. 9810	You can fill the USED BLADE CONTAINER with the content of your SAFEBOX. Or directly with your used blades. When the box is full, turn the lid until it shuts. Now the box cannot be reopened. The next step is to safely and completely dispose of the filled USED BLADE CONTAINER.
WALL MOUNT BRACK- ET USED BLADE CON- TAINER NO. 9845	Include it in your order now! With this mounting bracket you can fix your USED BLADE CONTAINER to a central location. Use the clamp and screws and nuts supplied with the prod- uct to attach it to either a pipe or a rod.
SAFEBOX NO. 108000	The SAFEBOX is large enough to store a large number of used blades safely. And at the same time, it is compact enough to carry with you. The two slits are not only used for filling, but also to "shorten" your snap-off blades. When your SAFEBOX is full, empty it into your USED BLADE CONTAINER.
SAFETY DEVICE NO. 9800	You can attach a U-shaped safety device to all SECUNORM PROFI cutters to prohibit blade change. When in place, the safety device can only be removed by leverage with a tool. The device works by disabling retraction of the plastic insert. Effectively hindering unqualified access to the blade.

MANUFACTURER

MARTOR KG | Lindgesfeld 28 | 42653 Solingen | Germany T +49 212 73870-0 | F +49 212 73870-90 | info@martor.de | www.martor.com